


ASSEMBLY INSTRUCTIONS:

- 1. FOLD UP ORGANIZER TRAY
- 2. FOLD UP THE INSERT & PLACE IN TRAY
- FOLD UP THE TALL SLEEVE AND WIPES LID AND PLACE IT INTO THE ORGANIZER INSERT AS SHOWN

ASSEMBLY

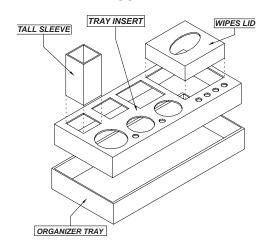

Description

- Increases productivity by organizing and standardizing bottle and tool placement at the workstation
- Aesthetically improves the appearance of the work area
- · Includes openings for bottles, wipes and hand tools
- Includes ESD protective swab holder insert and cover for wipes
- OD Dimension: 16-7/8" x 8-1/8" x 2-3/8"
- · Easily assembled
- Marked with ESD Protective symbol per ANSI/ESD S541
- · Custom configurations available
- Conductive 1 x 10² to < 1 x 10⁵ ohms be per ANSI/ESD STM11.11
- Chemical and moisture resistant
- Economical alternative to injection molded products
- Made in the United States of America.

47554 Universal Organizer, Plastek™

A smaller organizer is available. Click HERE for item 47556.

"It should be understood that any object, item, material or person could be a source of static electricity in the work environment. Removal of unnecessary nonconductors, replacing nonconductive materials with dissipative or conductive materials and grounding all conductors are the principle methods of controlling static electricity in the workplace, regardless of the activity." [ESD Handbook ESD TR20.20 section 2.4 Sources of Static Electricity]





Specifications and procedures subject to change without notice.

Universal Organizer, Plastek™

PROTEKTIVE PAK

PROTEKTIVE PAK 13250 MONTE VISTA AVENUE, CHINO, CA 91710 PHONE (909) 627-2578

ProtektivePak.com

DRAWING NUMBER 47554 DATE: March 2013